

ASSEMBLY, OPERATING INSTRUCTIONS
AND PARTS LIST

LEAF MULCHER

FOR SEARS 38" MOWER ATTACHMENT

MODEL NUMBER 917.250280

The above number is the Model Number of your Leaf Mulcher. Always mention the Model Number in all correspondence regarding the Leaf Mulcher or when ordering repair parts.

HOW TO ORDER REPAIR PARTS

All parts listed herein may be ordered through SEARS, ROEBUCK AND CO. or SIMPSONS-SEARS LIMITED. When ordering parts by mail from the mail order house which serves the territory in which you live, selling prices will be furnished on request or parts will be shipped at prevailing prices and you will be billed accordingly.

WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION AS SHOWN IN THIS LIST:

1. The PART NUMBER.
2. The PART NAME.
3. The MODEL NUMBER -- 917.250280.
4. The NAME of attachment --
Leaf Mulcher.

COAST TO COAST NATION-WIDE
SERVICE FROM SEARS

SEARS, ROEBUCK AND CO. and SIMPSONS-SEARS LIMITED in Canada back up your investment with quick, expert mechanical service and genuine SEARS replacement parts.


If and when you need repairs or service, call on us to protect your investment in this fine piece of equipment.



SEARS, ROEBUCK AND CO.—U.S.A.
SIMPSONS-SEARS LIMITED—CANADA

SETTING UP INSTRUCTIONS

1. Remove bolts (A), holding horn guard (B), to housing (C), and slip discharge chute cover (D), in position. Use new machine screws and nuts provided to secure discharge chute cover (D), to horn guard (B), and housing (C), as shown. Tighten nuts securely.

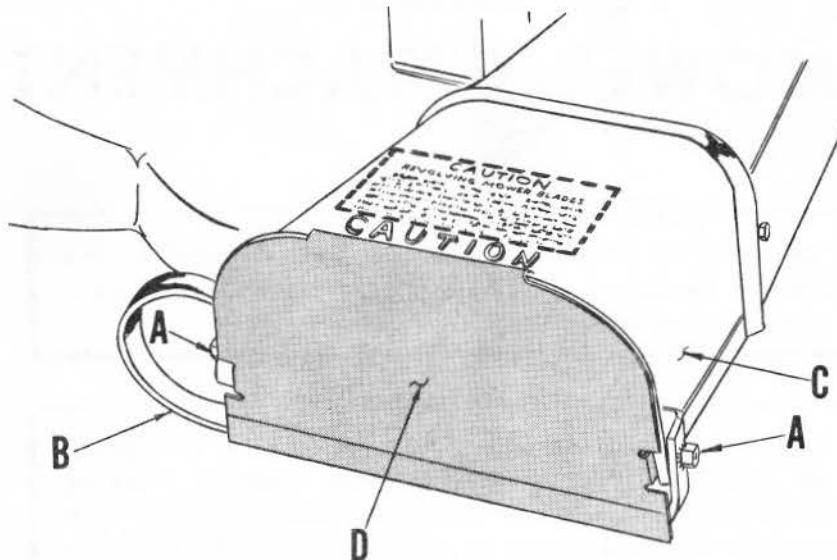

OPERATING INSTRUCTIONS

1. With Tractor engine operating at full throttle, engage blade clutch lever. CAUTION: Never engage blade clutch lever except when sitting on the Tractor seat and keep hands and feet from beneath the housing.
2. Depress foot pedal and place gear shift lever in second gear. Release foot pedal slowly. If leaves are heavy, Tractor may be operated in first gear. This will do a finer job of mulching leaves. Choose the gear which produces the best job.
3. Drive Tractor so that unmulched area will be on the operators right.
4. Place lift lever and gauge wheels in normal position.
5. To cross mulch, i.e. to go over the area a second time driving at right angles to the first time, produces an excellent job of ridding the area of leaves. Tractor may be driven in a higher gear (faster), when cross mulching.

PARTS LIST

KEY LETTER	PART NO.	DESCRIPTION
D	8389H	Discharge chute cover
---	431938	Screw, Hex hd. machine with lockwasher 5/16 - 18 UNC x 1
---	271184	Nut, Keps 5/16 - 18 UNC
---	8391H	Instruction and parts list.

Always order by Part Number -- not by Key Letter