

FLOATING LIFT LINK KIT



THIS KIT MUST BE USED TO ADAPT YOUR ELECTRIC HITCH TO A ROTO-TILLER ATTACHMENT.

ASSEMBLY


1. Remove the following items from your 3-Point Hitch: Lift Link-L.H., Lift Link Upper-R.H., Lift Link Locknut, Link Adjustment Sleeve with Roll Pin and Lift Link Lower-R.H. assembled together (Fig. 1). Save these parts for future use of 3-Point Hitch with other attachments.
2. Place a Lift Link Swivel on each Lift Link over threaded end. Secure with Locknuts flush with ends of Links (Fig. 2).
3. Insert unthreaded ends of the Lift Links from the outside of the Lift Arms. Secure with Retainer Springs (Fig. 2).
4. Assemble Lift Link Swivels to Lower Hitch Bars with Swivel to inside the right hand side and Swivel to outside on left hand side (Fig. 2). Secure with Retainer Springs.

ADJUSTMENTS

1. Level Attachment from side to side by adjusting Lift Link Locknuts below Lift Link Swivels (Fig. 2).
2. Level Attachment from front to rear.
 - a. Loosen Adjusting Screw Locknut.
 - b. Turn Adjusting Screw clockwise to lengthen the top linkage.
 - c. After adjusting, tighten the Adjusting Screw Locknut against the Tractor Clevis-R.H. NOTE: This adjustment is also for setting pitch and/or depth of ground working tool.

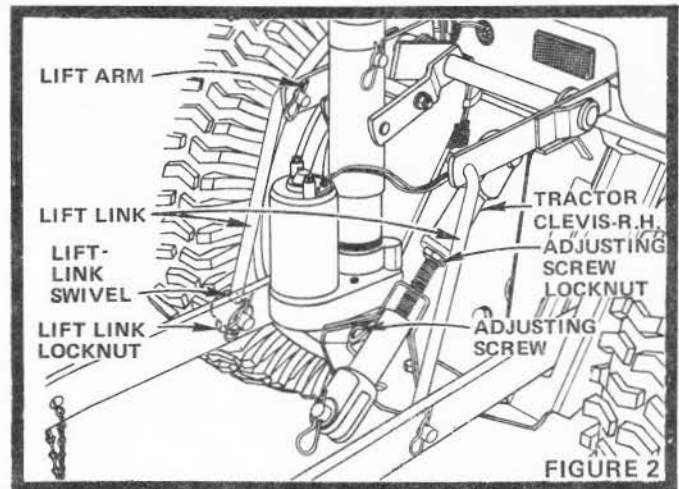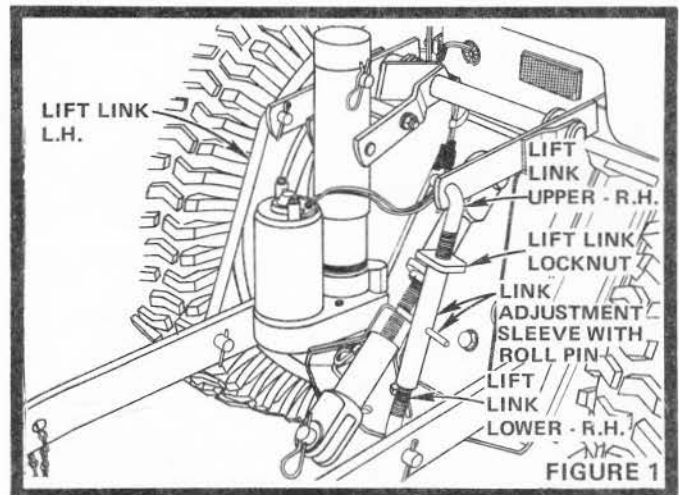

REPAIR PARTS

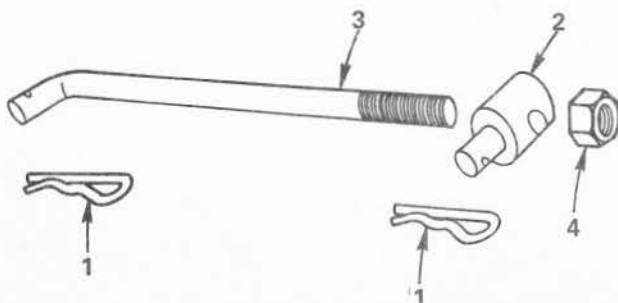

KEY NO.	PART NO.	DESCRIPTION
1	4939M	Retainer Spring
2	6782R	Lift Link Swivel
3	9796R	Lift Link
4	9204H	Locknut 1/2 - 20
--	9797R	Owners Manual

Catalog No. 25146 includes all of the above items.